



Instruction Manual

 
 
N0064 Keyboard



English · Deutsch

English

•Product Diagram

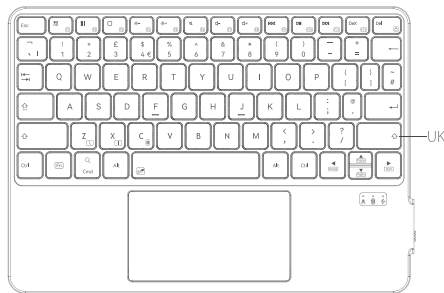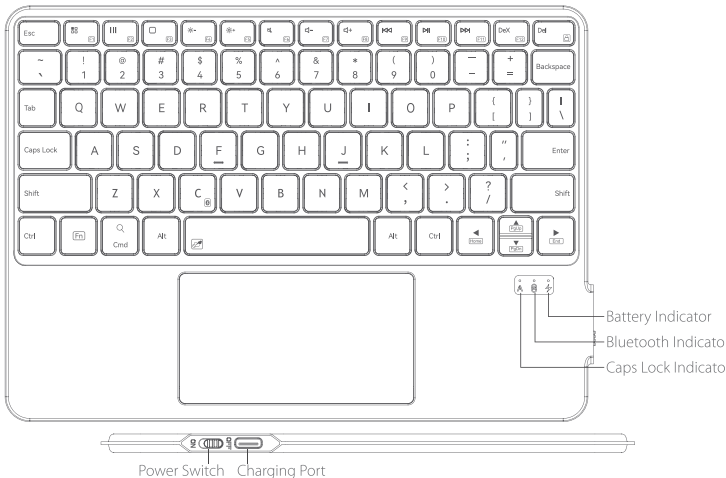

1. Bluetooth Pairing

Step 1: Attach the Samsung Pad to the protective case and slide the keyboard switch to the On position. Hold down the **Fn** + **C** simultaneously and then the keyboard will enter pairing mode with a flashing blue indicator light.

Step 2: On your Samsung Pad, go to Settings > Connections > Bluetooth, turn on Bluetooth and then "Inateck N0064" will show up in "Available Devices".

Step 3: Tap "Inateck N0064" and a "Bluetooth pairing request" window will pop up. Tap "Pair". The Bluetooth indicator will go off in seconds, which means that Bluetooth pairing is completed.

 
Fix Bluetooth Pairing Problems

Step 1: Go to Settings > Bluetooth, find "Inateck N0064" in "My Devices" and tap , then tap "Unpair". If there are multiple pairing records related to the keyboard, please clear all of them.

Step 2: Hold the **Esc** + **+** simultaneously for 3 seconds and then the three indicators will flash 3 times once the factory reset is completed.

Step 3: Pair your Inateck N0064 with your Samsung Pad.

2. Touchpad Gestures

	Drag: Click and hold the item until it lifts up and drag it to another location with another finger.		Scroll: Slide two fingers up or down to scroll.
	Swipe: Swipe left or right with two fingers.		Zoom in or out: Pinch with two fingers to zoom in or out.
	Secondary click: Click or tap with two fingers.		Show desktop: Swipe up with three fingers.
	App Exposé: Swipe up with three fingers and pause.		Swipe between full-screen apps: Swipe left or right with three fingers.

3.Shortcut Keys

1.					
	Undo		Close current task		Task View
	Home		Brightness-		Brightness+
	Mute		Volume-		Volume+
	Last track		Play/Pause		Next track
	Samsung DeX Mode				

Note:

1. **Fn** + **C** : Executes the function indicated by the icon in the lower right corner of the key, such as **Fn** + **Del** for screen lock.

2.Samsung DeX Mode: A feature that provides a desktop-like experience.

2.Common Keyboard Shortcuts

Fn + 	Search	Ctrl + C	Copy	Ctrl + V	Paste
Ctrl + A	Select all	shift + Space	Switch input method	Ctrl + X	Cut
Fn + 	Home	Fn + 	End	Fn + 	Page UP
Fn + 	Page Down				

4.LED Indicator

Indicator	Status	Meaning
Caps Lock Indicator	Solid	Caps Lock on
	Off	Caps Lock off
Bluetooth Indicator	Blinking	Bluetooth Pairing
	Off	Bluetooth connected or unconnected
Battery Indicator - Red	Blinking	Low battery
	Solid	Charging
Battery Indicator - Green	Solid	Fully charged

5.Restore Factory Defaults

Hold the **Esc** + **+** simultaneously for 3 seconds and then the three indicators will flash 3 times once the factory reset is completed.

6.Charging

When the battery is low, the battery indicator will flash in red. Please use the included charging cable to charge the keyboard in time. The recommended charging voltage is 5V. The keyboard will be fully charged in 2~3 hours. The indicator will stay in red when the keyboard is charging and turn green when it's fully charged.

7.Sleep Mode

When Inateck N0064 is left idle for 10 minutes, it will enter sleep mode and the Bluetooth connection will be disrupted. The connection can be rebuilt with a press of any key.

Note: Tapping the trackpad cannot wake up the keyboard.

8.Product Specification

Bluetooth Version	V5.3
Bluetooth Range	10m
Charging Time	2~3 h
Continuous Working Time	About 55h
Operating Temperature	-10°C ~ +55°C
Bluetooth Frequency Range	2402-2480MHZ
Actuation Force	60±10g
Battery Capacity	500mAh

9.Packing List

Inateck N0064 *1
USB A-C Charging Cable *1
Instruction Manual *1

EU Declaration of Conformity

Inateck Co., Ltd. hereby declares that this device complies with the Directive 2014/53/EU .
A copy of the Declaration of Conformity can be accessed from <https://www.inateck.de/pages/inateck-euro-compliance>.



Service Center

Europe

F&M Technology GmbH
Tel: +49 341 5199 8410 (Working day 8 AM - 4 PM CET)
Fax: +49 341 5199 8413
Address: Fraunhoferstraße 7, 04178 Leipzig, Deutschland

North America

Inateck Technology Inc.
Tel: +1 (909) 698 7018 (Working day 9 AM - 5 PM PST)
Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA

日本

Inateck 株式会社
電話番号: +81 06 7500 3304
〒 547-0014 大阪府大阪市平野区長吉川辺 3 丁目 10 番 11 号

F&M Technology GmbH

For Product and Battery
Fraunhoferstraße 7, 04178 Leipzig, Deutschland
Tel: +49 341 5199 8410
Email: service@inateck.com
Postal code: 04178

Inateck Technology (UK) Ltd.

 
95 High Street, Office B, Great Missenden, United Kingdom, HP16 0AL
Tel: +44 20 3239 9869

Manufacturer

Shenzhen Inateck Technology Co., Ltd.
Address: Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China
Email: product@licheng-tech.com
Postal code: 518129

Deutsch

•Produkt Diagramm

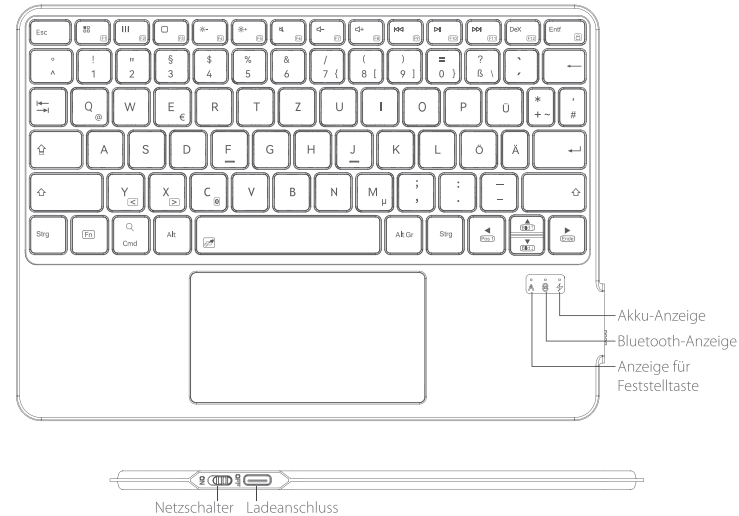

1. Bluetooth-Kopplung

Schritt 1: Bringen Sie das Samsung Pad an der Schutzhülle an und schieben Sie den Tastaturschalter in die Position ON. Halten Sie die Tasten **Fn** + **C** gleichzeitig gedrückt, dann wechselt die Tastatur in den Kopplungs-Modus und eine blaue Anzeileuchte blinkt.

Schritt 2: Gehen Sie auf Ihrem Samsung Pad zu Einstellungen > Verbindungen > Bluetooth, schalten Sie Bluetooth ein und dann wird "Inateck N0064" unter "Verfügbare Geräte" angezeigt.

Schritt 3: Tippen Sie auf "Inateck N0064" und ein Fenster mit der Aufforderung zur Bluetooth-Kopplung wird angezeigt. Tippen Sie auf "Koppeln". Die Bluetooth-Anzeige erlischt nach wenigen Sekunden, was bedeutet, dass die Bluetooth-Kopplung abgeschlossen ist.

Problem emit der Bluetooth-Kopplung beheben

Schritt 1: Gehen Sie zu Einstellungen > Bluetooth, suchen Sie "Inateck N0064" in "Meine Geräte" und tippen Sie auf das , dann auf "Entkoppeln". Wenn es mehrere Pairing-Datensätze für die Tastatur gibt, löschen Sie bitte alle dieser Kopplungseinträge.

Schritt 2: Halten Sie die **Esc** +  gleichzeitig 3 Sekunden lang gedrückt, dann blinken die drei Anzeigen dreimal auf. Dies deutet zeigt ein erfolgreiches Zurücksetzen an.

Schritt 3: Koppeln Sie Ihr Inateck N0064 mit Ihrem Samsung Pad.

2. Touchpad-Gesten

	Ziehen: Klicken Sie auf das Element und halten Sie es gedrückt, bis es sich anhebt, und ziehen Sie es mit einem anderen Finger an eine andere Stelle.		Scrollen: Schieben Sie zwei Finger nach oben oder unten, um zu scrollen.
	Wischen: Wischen Sie mit zwei Fingern nach links oder rechts.		Rein-oder rauszoomen: Drücken Sie mit zwei Fingern, um die Ansicht zu vergrößern oder zu verkleinern.
	Sekundärer Klick: Klicken oder tippen Sie mit zwei Fingern.		Desktop anzeigen: Wischen Sie mit drei Fingern nach oben.
	App Exposé: Wischen Sie mit drei Fingern nach oben und halten Sie an.		Streichen Sie zwischen Vollbild-Apps: Streichen Sie mit drei Fingern nach links oder rechts.

3.Schnellasten

	Rückgängig machen		Aktuellen Task schließen		Task-Ansicht
	Home		Helligkeit-		Helligkeit +
	Stumm		Lautstärke-		Lautstärke +
	Letzter Titel		Play/Pause		Nächster Titel
	Samsung DeX Modus				

Hinweis:

- Fn** +  : Führt die Funktion aus, die durch das Symbol in der unteren rechten Ecke der Taste angezeigt wird, z. B. **Fn** +  für die Bildschirmsperre.
- Samsung DeX Modus: Eine Funktion, die ein desktopähnliches Erlebnis bietet.

2.Häufig verwendete Tastaturbefehle

Fn + 	Suchen	Strg+C	Kopieren	Strg+V	Einfügen
Strg+A	Alles auswählen	Shift+Leertaste	Eingabemethode umschalten	Strg+X	Ausschneiden
Fn + 	Pos1	Fn + 	Ende	Fn + 	Bild hoch
Fn + 	Bild runter				

4.LED-Anzeige

Anzeige	Status	Bedeutung
Feststelltaste-Anzeige	Immer an	Feststelltaste ein
	Aus	Feststelltaste aus
Bluetooth-Anzeige	Blinkend	Bluetooth-Kopplung
	Aus	Bluetooth verbunden oder nicht verbunden
Akku-Anzeige - Rot	Blinkend	Akku niedrig
	Immer an	Aufladen
Akku-Anzeige - Grün	Immer an	Voll aufgeladen

5.Werkseinstellungen wiederherstellen

Halten Sie die **Esc** +  gleichzeitig 3 Sekunden lang gedrückt, dann blinken die drei Anzeigen dreimal, sobald das Zurücksetzen auf die erfolgreich Werkseinstellungen abgeschlossen ist.

6.Aufladen

Wenn der Ladezustand des Akkus niedrig ist, blinkt die Akku-Anzeige rot. Bitte verwenden Sie das mitgelieferte Ladekabel, um die Tastatur rechtzeitig zu laden. Die empfohlene Ladespannung beträgt 5 V. Die Tastatur wird in 2~3 Stunden vollständig aufgeladen sein. Die Anzeige bleibt rot, wenn die Tastatur geladen wird, und wird grün, sobald die Tastatur vollständig geladen ist.

7.Sleep Mode

Wenn das Inateck N0064 10 Minuten lang nicht benutzt wird, geht es in den Ruhemodus über und die Bluetooth-Verbindung wird unterbrochen. Die Verbindung kann mit einem Druck auf eine beliebige Taste wiederhergestellt werden.

Hinweis: Das Tippen auf das Trackpad kann die Tastatur nicht aufwecken.

8.Produktspezifikationen

Bluetooth-Version	V5.3
Bluetooth-Reichweite	10m
Ladezeit	2~3 h
Kontinuierliche Nutzungsdauer	ca. 55h
Betriebstemperatur	-10°C ~ +55°C
Bluetooth Frequenzbereich	2402-2480MHZ
Betätigungskraft	60±10g
Akkukapazität	500mAh

9.Packungsinhalt

- Inateck N0064 *1
- USB A-C-Ladekabel *1
- Bedienungsanleitung *1

FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Safety Warning:

This product contains a built-in rechargeable lithium battery. Please observe the following safety precautions: do not dismantle, hit, crush, or expose the battery to fire. If the battery experiences severe swelling, discontinue use immediately. Avoid placing the battery in high-temperature environments, and do not use it if it has been immersed in water. During transportation, do not mix the battery with metallic objects.

Batteriesicherheitshinweis:

Dieses Produkt enthält einen eingebauten wiederaufladbaren Lithium-Akku. Bitte beachten Sie die folgenden Sicherheitsvorkehrungen: Zerlegen Sie den Akku nicht, schlagen Sie ihn nicht, zerquetschen Sie ihn nicht und setzen Sie ihn nicht Feuer aus. Bei starkem Aufblähen des Akkus verwenden Sie ihn bitte sofort nicht mehr. Vermeiden Sie es, den Akku in heißen Umgebungen zu platzieren, und verwenden Sie ihn nicht, wenn er in Wasser getaucht wurde. Mischen Sie den Akku während des Transports nicht mit metallischen Gegenständen.

Charging Precautions/Ladehinweise

EN:

The power delivered by the charger must be between min [0.05] Watts required by the radio equipment, and max [1.25] Watts in order to achieve the maximum charging speed.

DE:

Der vom Ladegerät gelieferte Strom muss zwischen dem Mindestwert von [0.05] Watt, der für die Funkgeräte erforderlich ist, und dem Höchstwert von [1.25] Watt liegen, um die maximale Ladegeschwindigkeit zu erreichen.



折页

折后说明书尺寸：120*180mm

材质：100g 双胶纸

此页不做印刷