


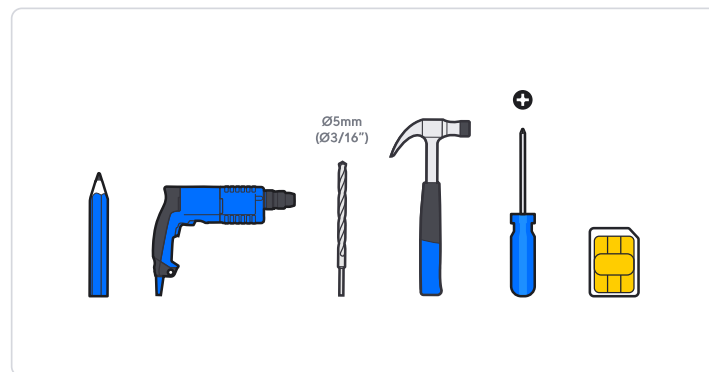


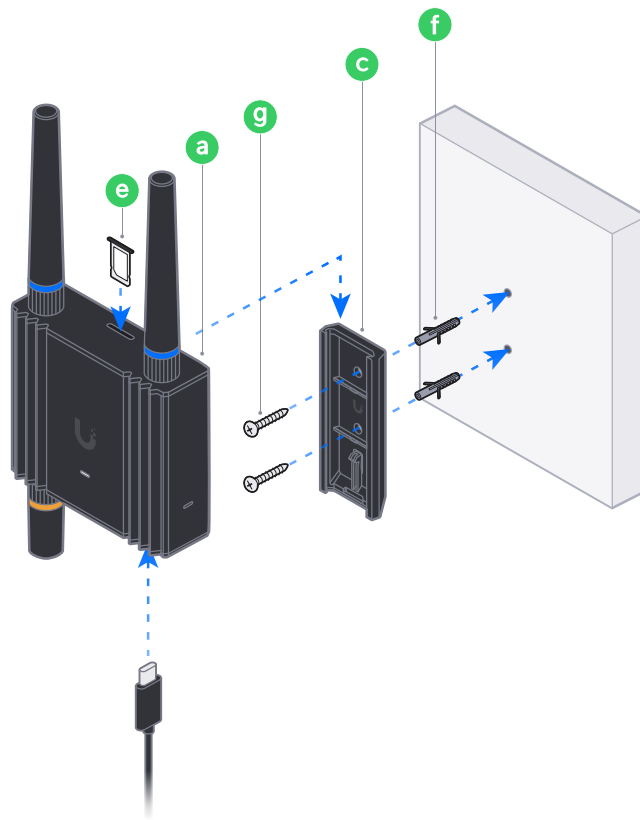


1

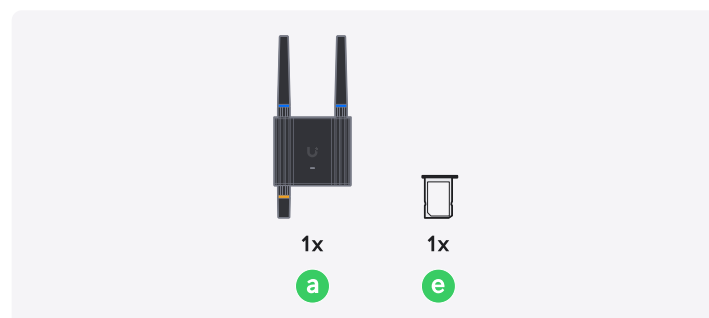

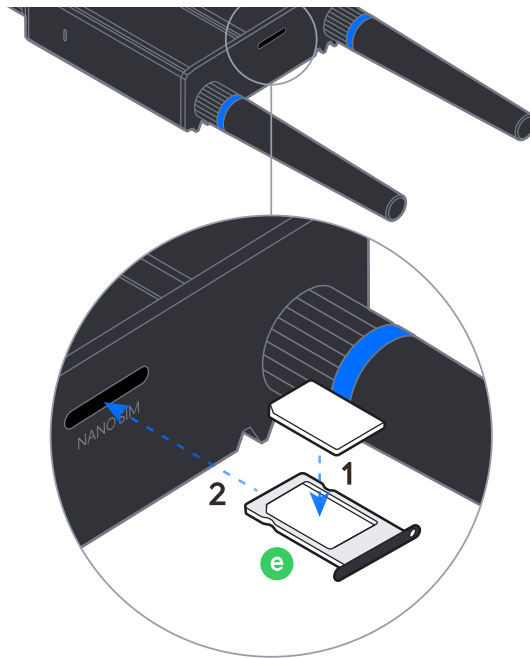


2


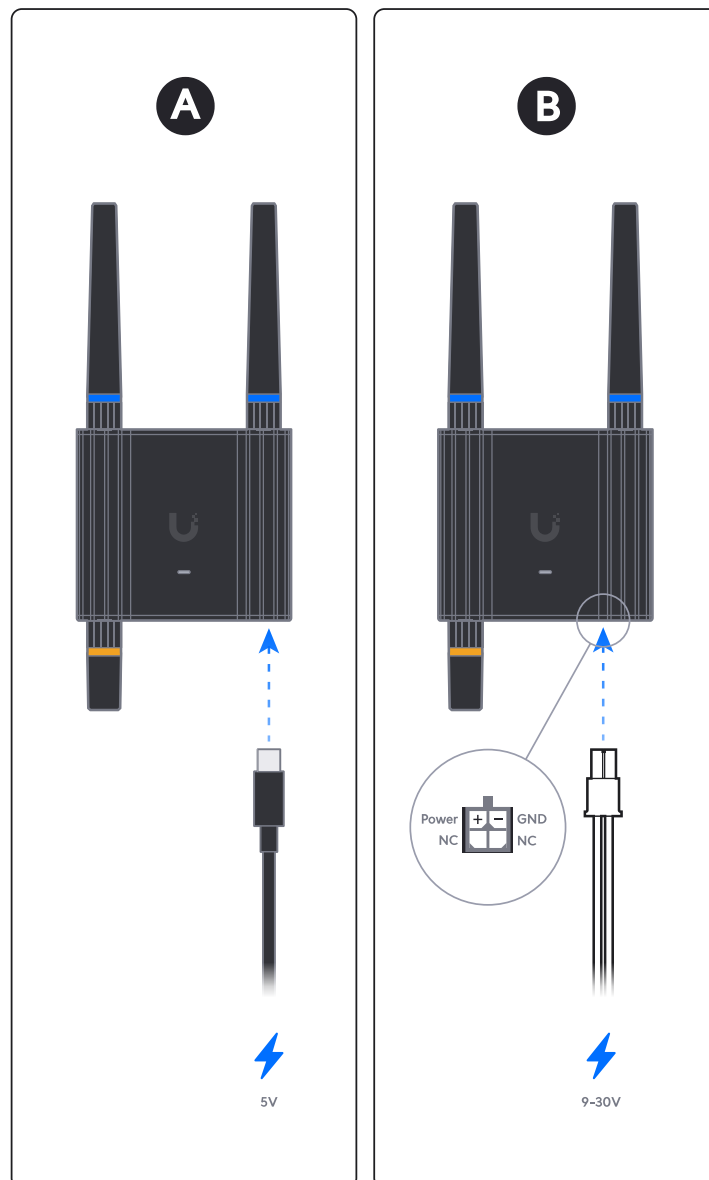


Power on and initialize (up to 2.5 min).


3

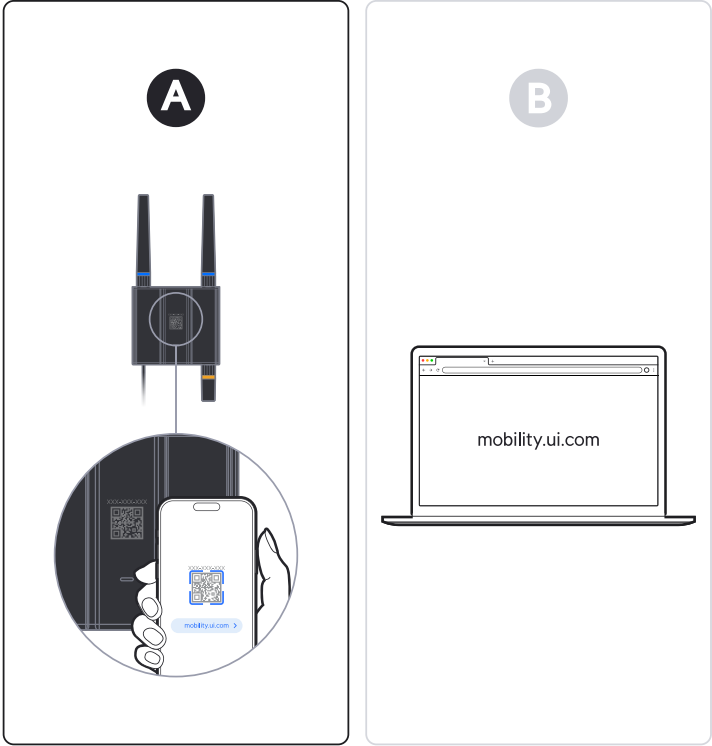



4

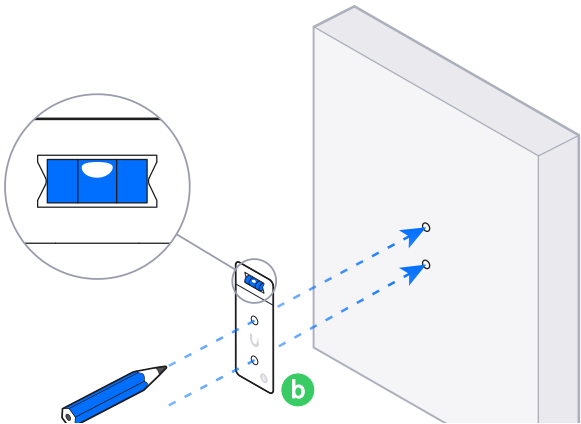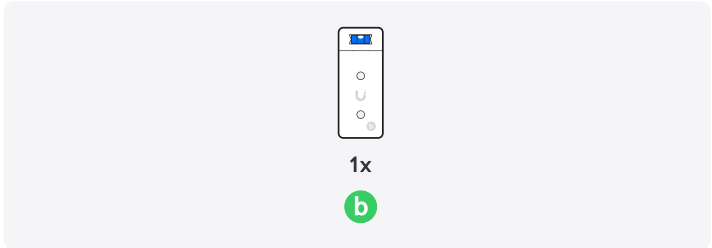

5

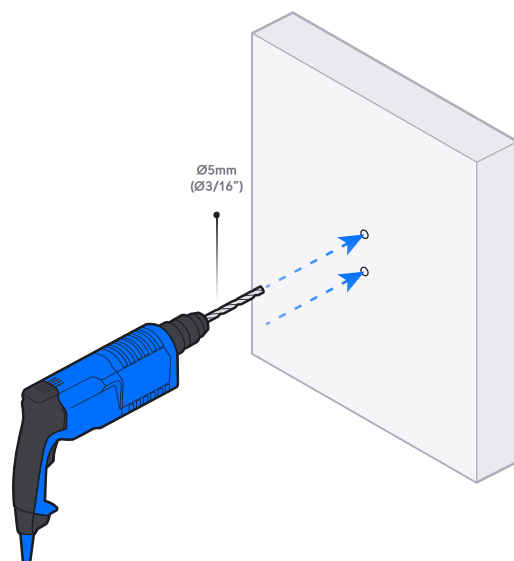


6

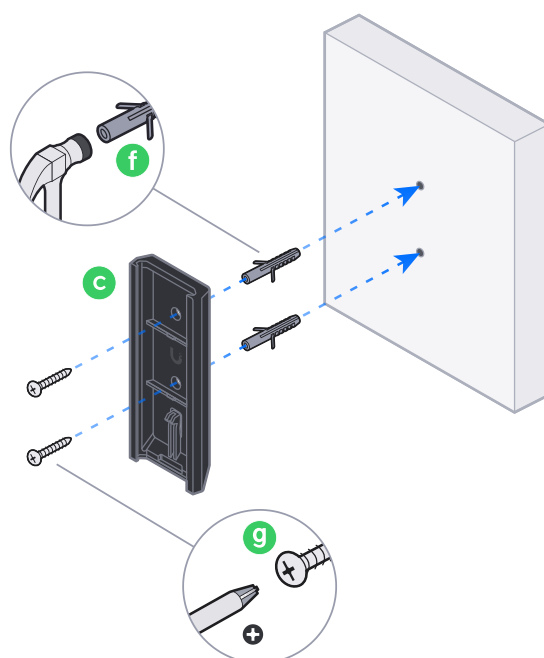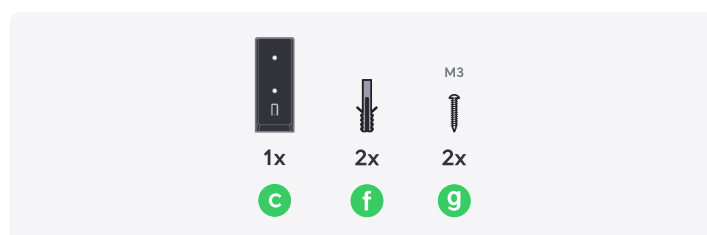



7

A

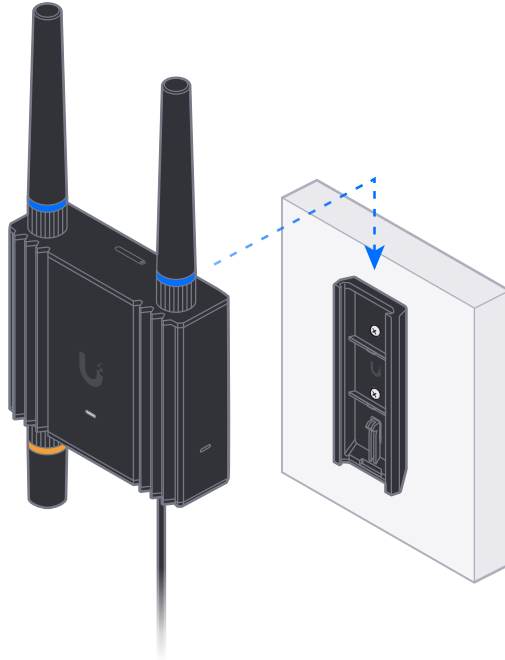

B

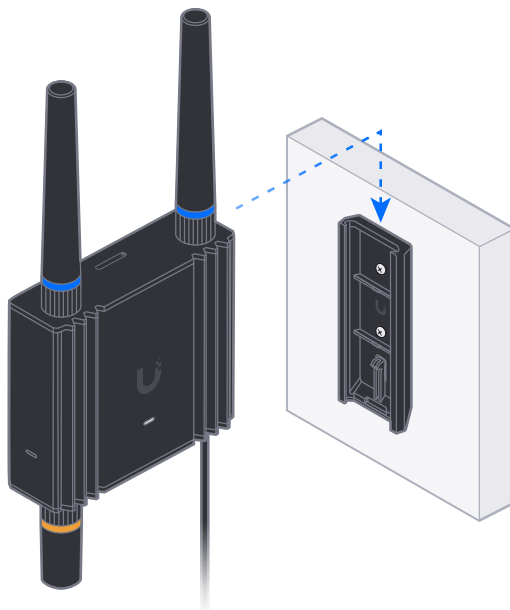

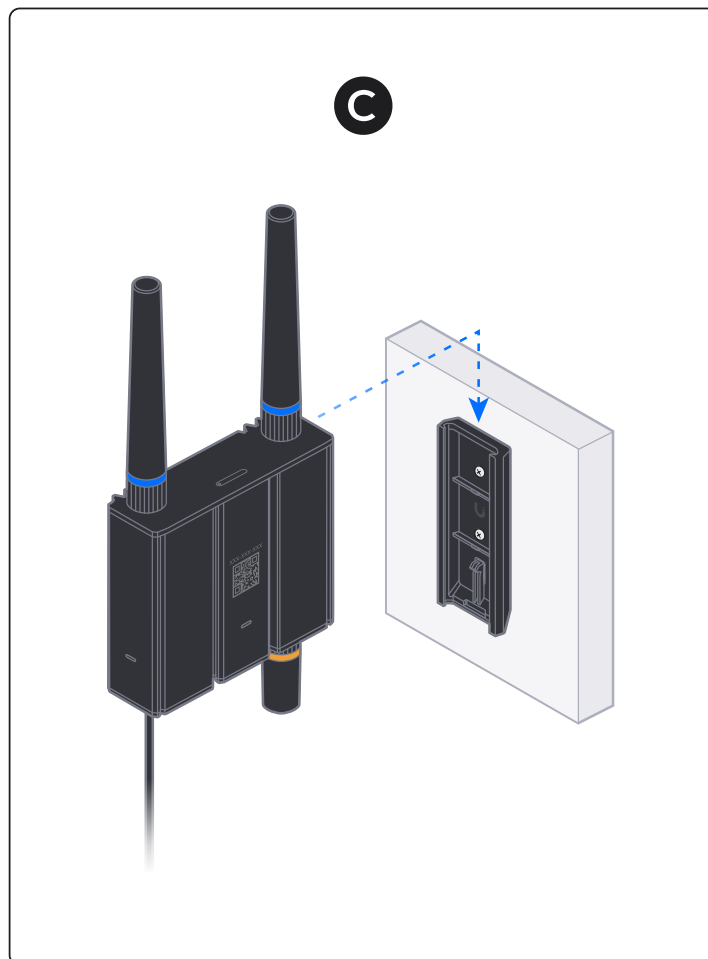


- | | | |
|---|----------------|---|
|  | Steady White | Device ready for setup. |
|  | Steady Blue | Setup successful. Continue at mobility.ui.com . |
|  | Flashing White | Unable to activate SIM. Check SIM PIN and APN. |


 Flashing Blue Unable to connect to the LTE network.
Relocate the device or contact your ISP.


For more details please visit mobility.ui.com/doc/led.

1

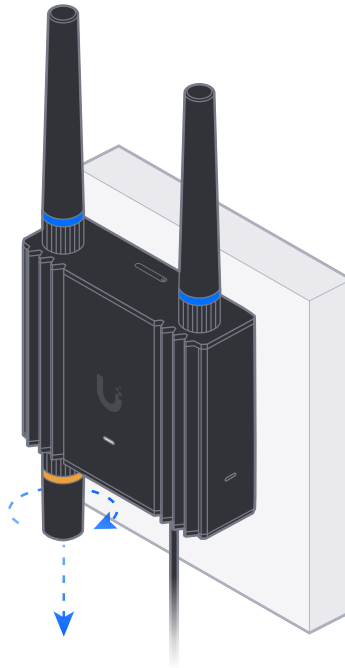

2

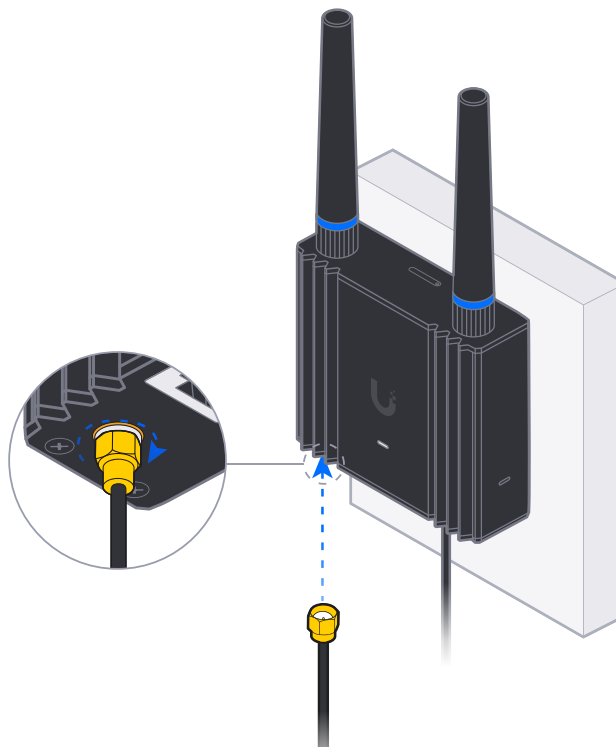

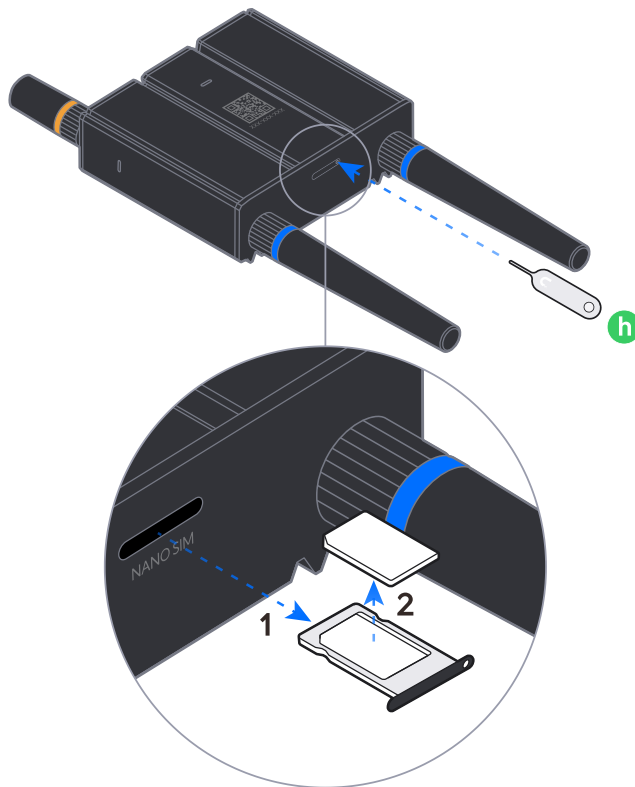

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

